

REVISED INSTRUCTIONS: PLEASE USE FOR ASSEMBLY OF FIRE PIT

# Steel Diamond Mesh Fire Pit

FB-8008

## Owner's Manual

### IMPORTANT SAFETY INSTRUCTIONS

Please read and follow ALL instructions before assembling or using this product.



- ALWAYS use MESH COVER when fire is lit.
- NOT FOR USE BY CHILDREN.
- The FIRE TUB is HOT! DO NOT TOUCH or allow children near FIRE TUB while it is in use.
- DO NOT use on wood deck or any other flammable surface.
- DO NOT use in the vicinity of flammable objects or indoors
- Screen Handle will be HOT when in use. Use a heat-proof barbecue mitt or poker tool to grasp handle.
- Approved items for burning: wood, self-starting fire logs, paper & charcoal.
- Bowl will not warp from heat, but you may place sand in the bottom, if desired.
- DO NOT put on VINYL COVER until FIRE TUB is completely cooled & embers extinguished.

### WARNING! CARBON MONOXIDE HAZARD

Burning charcoal inside can kill you. It gives off carbon monoxide, which has no odor. NEVER burn wood or charcoal inside homes, vehicles or tents.

081306

Copyright ©2007, CobraCo Mfg., Inc. • Lake Zurich, IL 60047

## FOR OUTDOOR USE ONLY! FOR OUTDOOR USE ONLY!

REVISED INSTRUCTIONS: PLEASE USE FOR ASSEMBLY OF FIRE PIT


### Parts Included:

- (4) Mesh Rim Sections
- (4) Legs
- (1) Ring Base
- (1) Fire Bowl
- (1) Mesh Screen Top
- (8) 5/8" Length Allen Screws (Hex Screws) & 8 Nuts (assembling Mesh Rim selection)
- (8) 3/8" Length Phillips Head Screws (assembling to Mesh Rim selection)
- (4) 5/8" Length Allen Screws (Hex Screws) & 4 Nuts (assembling Leg to Ring Base)
- (1) Nut (assembling Screen Top Handle with Bolt)
- (1) Screen Top Handle with Bolt
- (1) Vinyl Outdoor Protective Cover

Please check enclosed parts shipped with the fire tub. If any parts are missing do not return to your retailer. Please contact us first for replacement parts.

avantgardendecor.com  
consumercare@woodstream.com  
1-800-800-1819, opt. 1

Before attempting to cover the fire tub with protective vinyl outdoor cover, be sure to invert the fire screen top inside the fire pit.

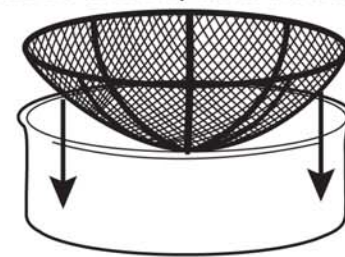


- !** DO NOT allow small children near flame. Hot embers can fly out of the FIRE TUB in windy conditions. Adequate fire extinguishing material should be readily available.
  - !** WARNING! DO NOT use this unit on a wood deck or on combustible surfaces such as dry grass, leaves, mulch, etc. DO NOT use this unit near heat sensitive or combustible structures such as vinyl or wood siding.
  - !** CAUTION! Read and follow all safety statements, Warnings, Assembly Instructions and Use & Care directions before attempting to assemble the unit.
  - !** CAUTION! Some parts may contain sharp edges. Wear protective gloves as necessary.
- Copyright ©2007, CobraCo Mfg., Inc. Made in China  
Lake Zurich, IL 60047

### Assembly Instructions:

- F1. Assemble Mesh Ring Sections.
  - A. Secure each mesh panel together using two 5/8" Hex Screws and Nuts.
  - B. Repeat Step A until all 4 mesh panels are joined and form a circle.



- F2. Affix the Fire pit Leg to the Ring Base with one screw & nut. Repeat for all four legs.

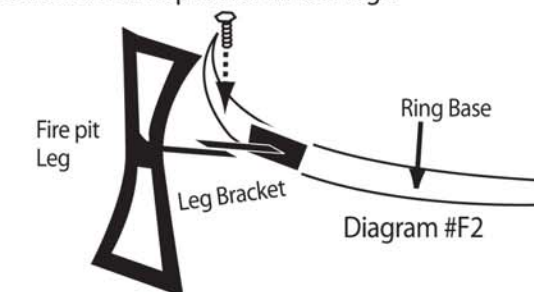

- F3. Place Leg/Ring Assembly on top of the Mesh Ring Assembly (both inverted) and fasten each leg to the Mesh Ring with Phillips Head Screws. (slight alignment adjustments may be necessary)
- F4. Place fire bowl in center of Mesh Ring.
- F5. Assemble Screen Cover Handle. Secure handle to top of the screen with one bolt.